



STEP 1. STRIP LOOP WIRE AND LEAD-IN CABLE

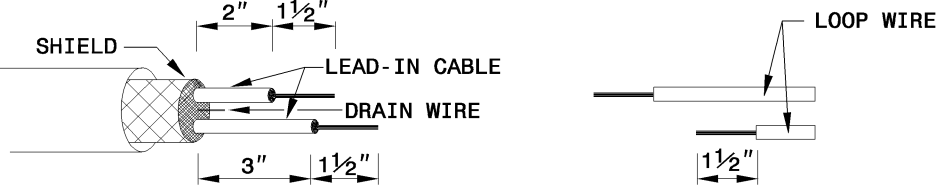


STEP 2. CONNECT AND SOLDER

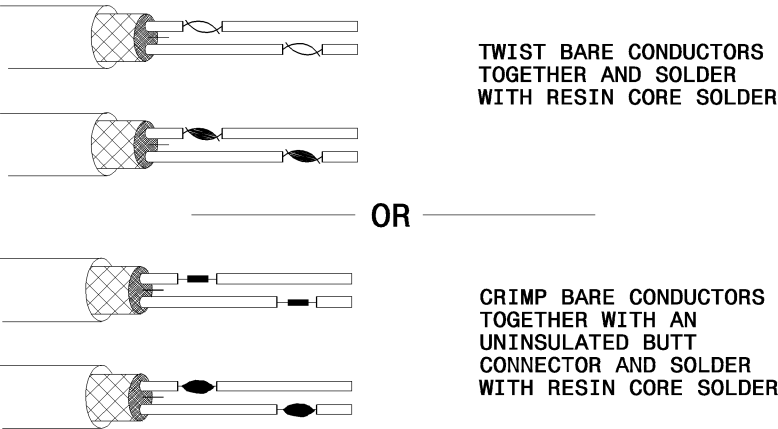


BOND SHIELD DRAIN WIRE AT SPLICE SECTIONS (DO NOT GROUND)

LOOP WIRE AND LEAD-IN CABLE CONNECTION DETAILS

SINGLE CONNECTION      SERIES CONNECTION

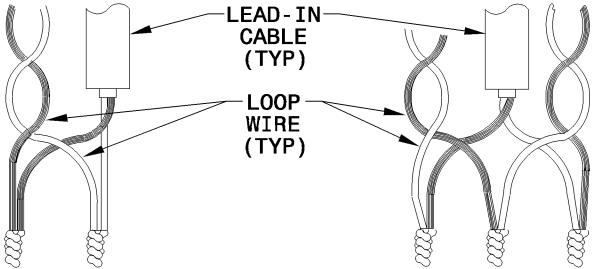

STEP 3. INSULATE EACH SOLDER JOINT SEPARATELY

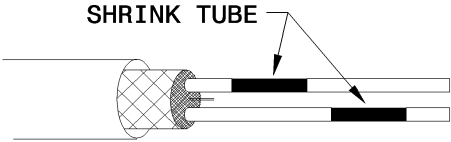

STEP 4. ENVIRONMENTALLY PROTECT SPLICE

